


Luxury Multi-Functional Massage Chair

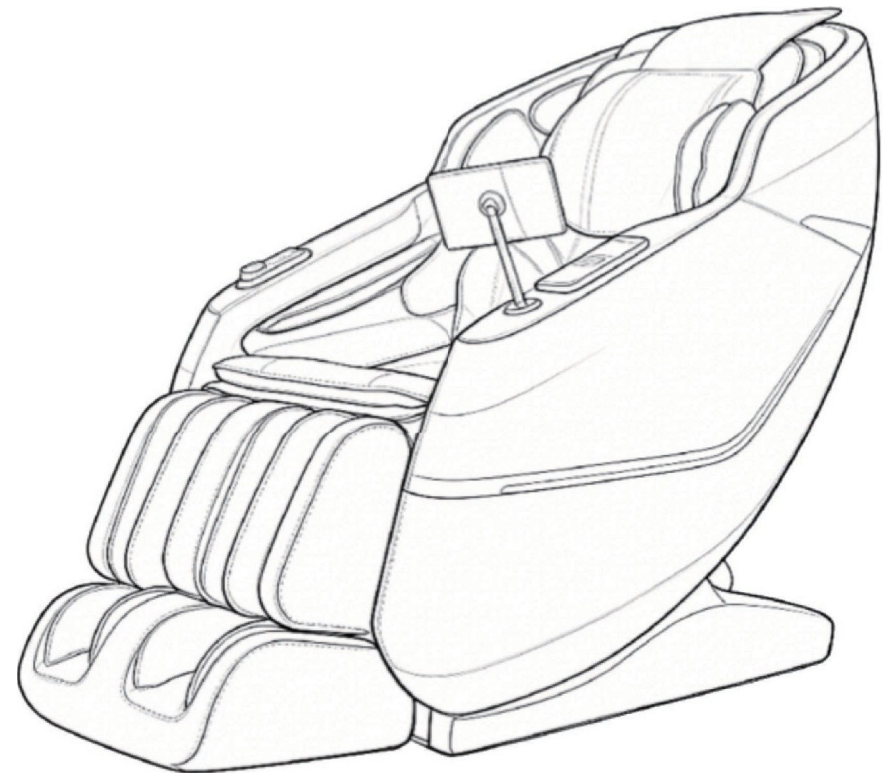

Living Art

Thank you for purchasing our company's massager products.

This massage chair adopts ergonomic design to realize the massage of neck, arms, back, waist, buttocks.

Massage of legs, waist and other parts, various massage methods, warm compress, bladder squeezing massage, etc.

Function It is a luxurious and high-end massage chair.

Before use, please read this manual carefully and pay special attention to the safety precautions.

To ensure the correct operation and use of this product.

Keep the user manual properly for future reference.

DIRECTORY

1. Product features
2. Name of each component
3. How to use
4. Maintenance
5. Precautions
6. Security protection
7. Warm reminder
8. Technical Parameters
9. Voice command
10. Name and content of hazardous substances in products
11. Product warranty instructions
12. After-sales service guarantee card
13. Analysis and troubleshooting of common faults

13. Analysis and troubleshooting of common faults

Fault phenomenon	Possible reasons	Treatment method
• There is sound • Running sound • The filling sound of the spiral • The sound of the airbag deflating • Solenoid valve switching sound • Gas pump working sound	Emitted when the product is working The sound of mechanical operation	This sound is normal No processing required.
The whole machine does not work at all	The power plug is not inserted into the socket The outlet switch is not turned on	Check the power plug, socket and make sure the plug and socket are in good contact
Massage in progress Stop suddenly	This product has just completed 15 minutes of rated operating time and automatically switched to standby mode. Exceeded rated use time. Motor overheat protection. Shut down. Cut off power supply. Wait for the motor to cool down before using it.	If you want to massage again, please press the Mountain key again to turn on the massage function

The company reserves the right to improve the product and manual. Any changes are subject to change without prior notice. The appearance of the product shall be subject to the actual product.

This brochure has been carefully checked, but it is not ruled out that there may be printing errors or misunderstandings in the content. Please understand that our company reserves the right of interpretation.

 Improper disposal of waste can cause environmental pollution.

CERTIFICATE

Product Name: _____ Model: _____

Detection Job Number: _____ Production Date: _____

3. Howto Use

All-in-one, no installation required

No complicateci installation process, ready to use right out of the box


1. Connection cable installation method



Figure 1

Connect the three-prong plug of the power cord to the plug on the electrical box as shown in Figure 1. Connect the other end to the power socket.

2. Moving the massage chair

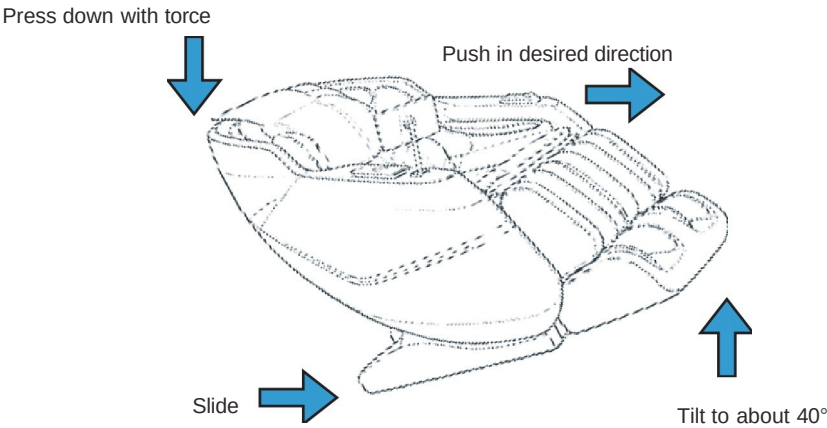

- Stand at the top of the massage chair back and press down firmly to lift your legs off the ground.
- Tilt the chair back 40° to allow for easy movement around the room.
- Do not press down too hard to avoid the chair tipping over completely and causing damage.
- Do not move the massage chair while someone is sitting on it.
- Moving the massage chair may damage the floor; it is recommended to piace a mat or similar materialai under the chair.

3. Name and content of hazardous substances in products

Part name	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Chromium (Cr)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
circuit board	X	O	O	O	O	O
leather wire	O	O	O	O	O	O
motor	X	O	O	O	O	O
sponge	O	O	O	O	O	O
packaging	O	O	O	O	O	O
metal rack	X	O	O	O	O	O
plastic parts	X	O	O	O	O	O

This form is prepared in accordance with the provisions of SJ/T 11364

O indicates that the content of the hazardous substance in all average materials of this part is below the limit requirements specified in GB/T 26572.

X means that the content of the hazardous substance in at least a certain average material of the component exceeds the limit requirements specified in GB/T 26572.

The "hazardous substances" shown in the table will not cause any harm to the human body and the environment under normal use of the product. The "hazardous substances" shown in the table "Hazardous substances" and the parts in which they exist provide consumers and recycling operators with information on the existence of relevant substances to help product disposal Proper handling when necessary.

<<Regulations on the Recycling and Disposal of Waste Electrical and Electronic Equipment Instructions>> The company advocates an environmentally friendly and low-carbon consumption experience. 11 is recommended that users who own the product should abide by the relevant national laws and regulations on the recycling and disposal of waste electrical and electronic products when they no longer need it, and hand it over to local merchants with nationally recognized recycling and processing qualifications for recycling, thereby reducing resource waste and protecting the earth's natural environment.

11. Product warranty instructions

1. In order to protect the interests of consumers, our company's products strictly comply with the national three guarantees regulations. Consumers can enjoy a one-year warranty. Warranty service: If the product is damaged due to product quality problems during the warranty period, the company can repair and replace spare parts free of charge.
2. During the warranty period, if a malfunction occurs due to the following circumstances and requires service, the company will charge material costs at its discretion.
MASSAGE CHAIR

- Those who use it improperly or dismantle or repair it by themselves
- Users who do not follow the specified power supply voltage
- Those who *move*, transport or modify the equipment by themselves after installation
- Those whose appearance is naturally dirty due to use
- Damages caused by natural disasters or man-made disasters.

3, In the following situations, the company will charge according to the price

- Those beyond the warranty period
- Those who fail to present the warranty card

Product User Manual
MESSAGE CHAIR



IV. Technical Parameters

Product Name	Luxury Multi-Function Massage Chair
Product Model	Y39
Rated Voltage	110V ~ 240V
Rated Frequency	50/60Hz
Rated Power	120W
Rated Working Time	15 min
Safety Category	I class
Certificate	CE

IX. Voice Command

VOICE COMMANDS

BLUETOOTH: AMY -888			
Wake up word: "Hi massage chair"			
1	Power on	19	Turn on arm airbags
2	Power off	20	Turn on shoulder airbags
3	Increase intensity	21	Turn on leg airbags
4	Decrease intensity	22	Start massage mode one
5	Increase massage time	23	Start massage mode two
6	decrease massage time	24	Start massage mode three
7	Heat on	25	Start massage mode four
8	Heat off	26	Start massage mode five
9	Increase airbag intensity	27	Start massage mode six
10	Decrease airbag intensity	28	Start massage mode seven
11	Foot roller on	29	Start massage mode eight
12	Foot roller off	30	Start massage mode nine
13	Chair up	31	Start massage mode ten
14	Recline chair	32	Zero gravity one
15	Legs up	33	Zero gravity two
16	Legs down	34	Zero gravity off
17	Airbags on	35	Audio volume up
18	Airbags off	36	Audio volume down

12. Manual operation instructions



- Turn the massage chair on or off.
- Pause or continue the massage.
- There are 20 self-motion modes that can be switched freely.
- Multiple manual massage techniques can be selected and switched freely.
- Massage area selection: You can choose to massage a fixed point or a range of areas. When using a fixed point, the position of the motor can be manually adjusted. (Manual mode only)
- The massage arm spacing is adjustable to three levels: wide, medium, and narrow. It is available in manual mode only for tapping, patting, and acupressure.
- Turn the whole body's endovascular function on or off.
- Turn the sac function on or off for the whole body and individual areas such as the shoulders, arms, and legs.
- Turn the foot roller function on or off.
- Adjust the speed of the foot roller. There are three adjustable speeds.
- The back massage mechanism offers three adjustable intensity levels.
- Turn the zero-gravity function on or off.
- Turn the heat therapy function on or off.
- Adjust massage time: Each press increases the massage time by 5 minutes, up to a maximum of 30 minutes.
- Turn the blue ambient light function on or off.
- Turn the massage chair ambient light function on or off.
- Long press to raise the backrest.
- Long press to lower the backrest.
- Long press to raise the legs.
- Long press to lower the legs.

13. Operation instructions for shortcut keys



4. Maintenance

1. For daily cleaning, please wipe with neutral detergent and a soft cloth. Do not use corrosive detergents.
2. **If** the power cord is damaged, it must be replaced by the manufacturer's designated repair shop staff to avoid danger.
3. When not using this product or cleaning, please unplug the power supply to avoid danger.
4. Do not use any sharp objects to cut the surface of the product.
5. Do not place the product in a humid environment. It should be placed in a dry place.
6. Do not press hard or exert strong pressure on the product.

5. Notes

In order to ensure the safe and correct use of the massage chair, please refer to the operation manual in detail before using this product. In order to reduce the risk of fire, burns, electric shock, or injury to others, please follow the following instructions

1. Do not use power supplies other than AC 220V.
2. When no one is using the machine, be sure to unplug the power plug of the massage chair from the socket. When not using the machine on a daily basis or before disassembling the device/parts, be sure to unplug the power plug from the socket in time.
3. In order to avoid overheating, electric shock, or injury, please do not put the product under other coverings such as pillows or blankets.
4. **If** the product is used for children or people with physical and mental dysfunction and disabilities, they need to be supervised and guided by an adult guardian.
5. Be sure to use this product according to the purpose described in the user manual. Do not use spare parts that are not recommended by the manufacturer.
6. Do not use this product when the following conditions occur. The power cord or power plug is damaged. If the operation is abnormal, if it falls to the ground or other damage falls into the water, please send the product back to the repair service center for inspection and repair.
7. Do not drag the power cord to move the product or use the power cord as a handle.
8. The power cord must be kept at a safe distance from the heating surface.
9. Do not operate this product under the condition that the air outlet is blocked. Please keep the air outlet unobstructed to avoid being blocked by cotton fluffs, hair, etc.
10. Do not insert or drop objects into any opening of the product.
11. Do not use this product outdoors.
12. Do not operate this product in a place filled with spray products or oxygen.
13. When cutting off the power, please turn off all operation controls and then unplug the power plug from the socket.
14. Do not cover the massage chair to avoid causing malfunction or fire hazards due to excessive temperature.

6. Safety protection

Do not use the massage chair in excessively humid or dusty environments to avoid electric shock or malfunction.

Do not use the massage chair when the room temperature exceeds 40°C.

Do not place the massage chair near heaters, stoves, or in direct sunlight.

This massage chair is designed for personal use and is not suitable for any commercial use.

This massage chair is for indoor use only.

When using the massage chair in low-temperature environments, do not suddenly increase the temperature.

It is recommended to gradually adjust the temperature to the normal range before use.

If the massage chair is moved from a low-temperature storage area to a warm environment, water accumulation inside the components may affect the normal operation of the machine or even cause malfunction. It is recommended to place the product at normal room temperature for 1 hour after moving it.

7. Warm Reminders

Other functions can only be selected after the power switch is turned on.

Children should use this massage chair under adult supervision to avoid damage to the equipment and injury to the child due to improper operation.

Do not allow children to climb on this massage chair to avoid falls.

Adjust the massage intensity of the chair. Too low an intensity will not provide the necessary stimulation, while too high an intensity can easily cause fatigue and damage the skin. The massage intensity and frequency should gradually increase from light to heavy.

Relax your body when using the massage chair. In addition to concentrating your mind, it is especially important to maintain a calm and relaxed state of mind.

Suitable for patients with heart disease, hypertension, and osteoporosis. Massage chairs are not suitable for individuals with localized skin abrasions, ulcers, bleeding, tuberculosis, or cancer.

People who are excessively hungry, excessively full, intoxicated, or excessively fatigued should not use the massage chair.

To avoid reducing the massage effect or causing injury, do not use the massage chair simultaneously with other therapeutic devices such as electric blankets.

Do not use the massage chair within one hour of entering the room to avoid adverse effects.

Do not use the massage chair when your hands or other parts of your body are wet. Do not plug or unplug the power cord.

Do not insert any objects or flammable materials into the massage chair. This may cause electric shock, malfunction, or fire.

If you feel any discomfort during the massage, please stop immediately.

This product is not for self-diagnosis or treatment. If diagnosis or treatment is required, please consult a doctor. This product should be handled by a professional medical person.

Do not use this product if you are currently receiving medication, pregnant, or menstruating.

****Maintain proper massage time:****

Each massage session should ideally last 15 minutes. Do not use for more than half an hour per person.

After half an hour, allow the massage chair to rest for 10 minutes before using it again. Prolonged continuous use may trigger the overheat protection device and automatically shut off the power.

The surface of the device gets hot. Those who are not sensitive to heat must be cautious when using it.

Do not directly massage the elbows, knees, chest, abdomen, etc.

****Situations where massage chair should not be used:****

If any of the following occurs, please immediately turn off the switch, disconnect the power, and contact our company.

Accidentally spilling liquid on the massage chair may result in electric shock.

The massage chair's fabric cover is damaged. Internal components are exposed.

If abnormal or severe pain occurs during massage, please stop immediately and seek medical attention.

If any malfunction or abnormal condition is detected during use, please stop using the device immediately.

In the event of a current interruption during use, take precautions to avoid injury to the user due to a sudden restoration of power.

In the event of lightning.